

# SCORPION 10 PRO Windows

Industrial rugged tablet



**BRESSNER Technology GmbH**

Boschstrasse 2A

82178 Puchheim

Phone: +49 (0) 8142 47284-76

E-Mail: [scorpion@bressner.de](mailto:scorpion@bressner.de)


# OVERVIEW

## Package content

- 1x SCORPION 10 PRO Windows
- 1x Hand-Strap
- 1x AC power adapter
- 1x Carry handle

## Components


### Front view:

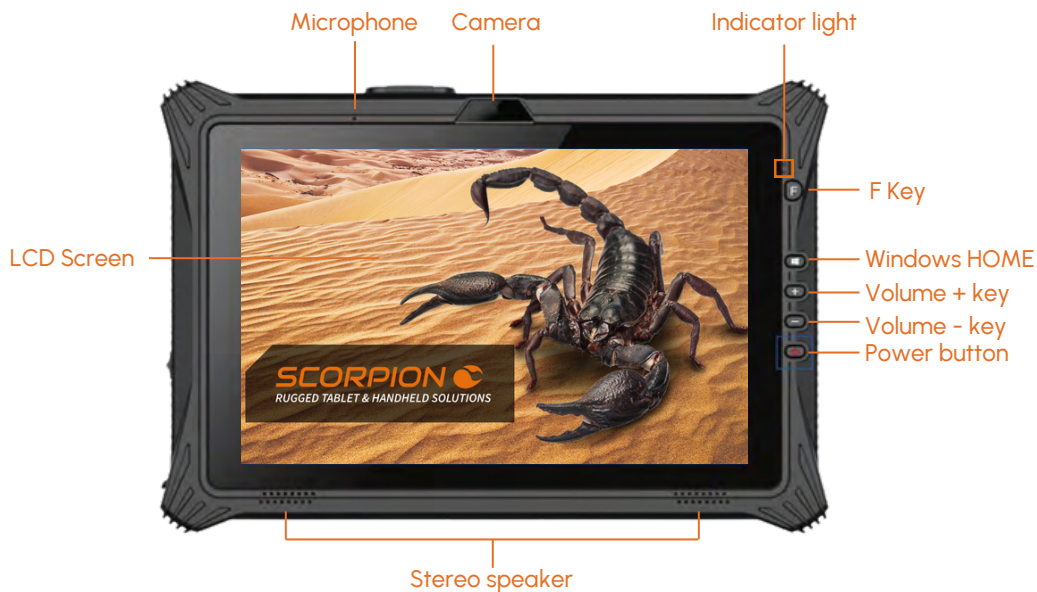


### Right-side view:




### Rear view:

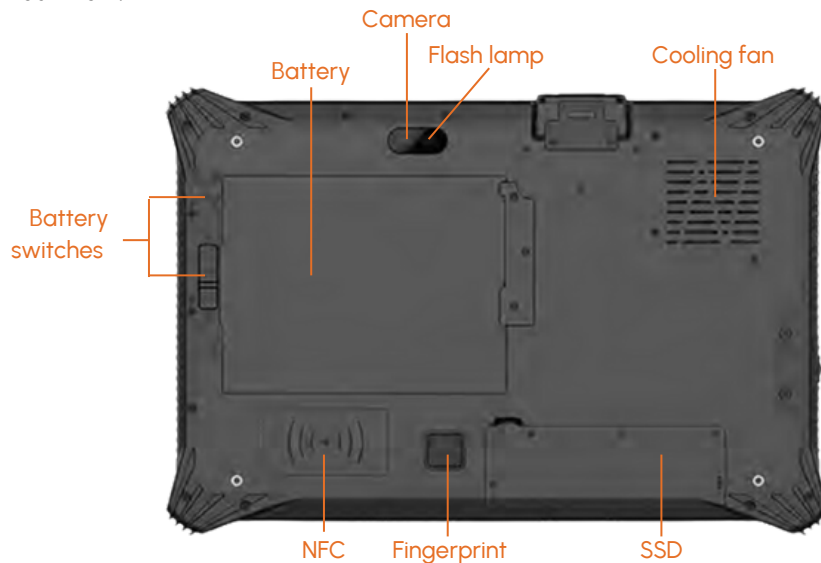

### Left-side view:

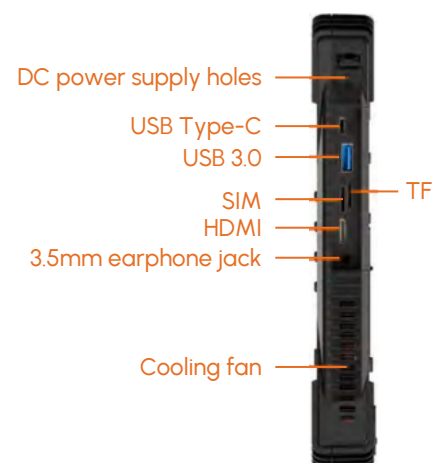

### Top view:

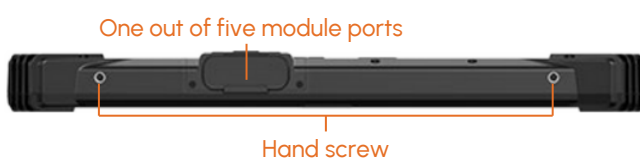

### Bottom view:



# BATTERY



1. Ensure that you use the battery provided with the SCORPION 10 PRO Windows. Using an incorrect battery may result in a risk of explosion.
2. Before installing the battery, make sure all components are dry. Using wet components may cause damage that is not covered by the warranty.

## Replacing battery


1. Carefully place the SCORPION 10 PRO Windows upside down..
2. Switch the battery switches to the unlocked position.



3. Carefully pry the battery cover out of the grooves on the sides.
4. Now remove the old battery and insert the new battery. Please insert the connector side first and then press the battery down.
5. After inserting the new battery, close the battery cover and slide both battery switches back to the locked position.

## Installation of SIM and TF card

Insert a Micro-SIM card and a TF card in the following position:

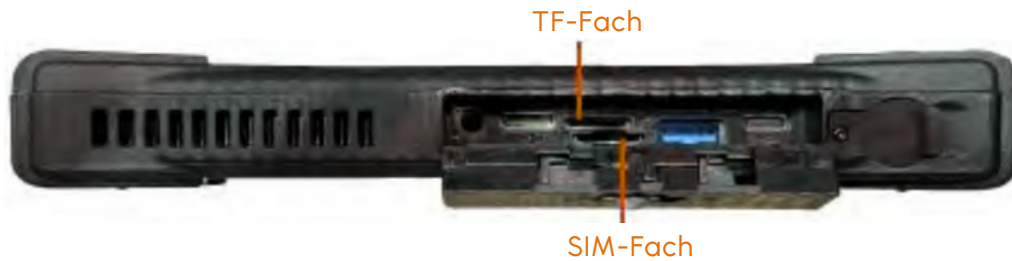

## Removing the SIM/ TF card

1. Gently press the SIM card or TF card inward.



2. The card will automatically pop out.
3. You can then easily remove the SIM/TF card.

# CHARGING



The use of batteries and chargers that are not included with the SCORPION 10 PRO Windows may cause damage that is not covered by the warranty.

---

**Note:** The battery is delivered to you in power-saving mode, which protects it from charging and discharging. This mode will be deactivated once you insert the battery and connect the SCORPION 10 PRO Windows to a power source for the first time. When the power adapter is connected, the battery will also begin to charge

1. Open the cover on the left side of the SCORPION 10 PRO Windows to expose the DC-port.



2. Insert the DC-cable of the supplied charger into the DC-port of the SCORPION 10 PRO Windows.
3. Plug the female end of the cable into the provided power adapter and the male end into a power outlet.
4. The SCORPION 10 PRO Windows will now charge and can be powered on.

# TURNING ON/OFF





## Turn on

Press the power button (  ). The Windows operating system should start..



## Turn off

When you finish a work session, you can either shut down the system or leave it in sleep mode.

To...	Do this...
<b>Power off (Shutdown)</b>	Click  → [  Power ] → [ Shut down ] .
<b>Sleep</b>	Use one of these methods: <ul style="list-style-type: none"><li>• Press the power button.</li><li>• Click  → [  Power ] → [ Sleep ] .</li></ul>

## Restarting the tablet

When the SCORPION 10 PRO Windows crashes due to a problem, you may need to restart it. If you are sure that the SCORPION 10 PRO Windows has crashed and you cannot use the reboot function provided by the operating system, please reboot in one of the following ways:

- Use **Ctrl + Alt + Del** and click **[Restart]**.
- Hold the power button for 5+ seconds to force shutdown.

# SYSTEM BASICS

## Touchscreen

**CAUTION:** Do not use a sharp object such as a ballpoint pen or pencil on the touchscreen. Doing so may damage the touchscreen surface. Use your finger or the stylus.


The following table shows how you use the touchscreen to obtain equivalent mouse functions.

Term	Action	Equivalent mouse function
<b>Tap</b>	Touch the screen once.	Click / Point
<b>Double-tap</b>	Touch the screen twice rapidly.	Double-click
<b>Tap and hold</b>	Tap and hold until a popup menu appears.	Right-click
<b>Drag</b>	Click and hold the screen while moving.	Drag

## WLAN

The WLAN (Wireless Local Area Network) module supports WIFI 802.11(a/b/g/n/ac).

**To turn on:**

Click  → **[Settings]** → **[Network & Internet]** → **[WLAN]**, Slide the WLAN switch to the [On] position.

**To turn off:** You can turn off the WLAN radio the same way you turn it on. If you want to quickly turn off all wireless radio, simply switch on Airplane mode.

Click  → **[Settings]** → **[Network & Internet]** → **[Airplane mode]**, Slide the Airplane Mode switch to the [On] position.

## Bluetooth


**To turn on:**

Click  → **[Settings]** → **[Devices]** → **[Bluetooth]**, Slide the Bluetooth switch to the [On] position.

**To turn off:**

Click  → **[Settings]** → **[Network & Internet]** → **[Airplane mode]**, Slide the Airplane mode switch to the [On] position

**Connecting to another Bluetooth Device:**

1. Make sure that the Bluetooth function is enabled (as described above).
2. Make sure that the target Bluetooth device is turned on, discoverable and within close range.
3. Click  → **[Settings]** → **[Devices]** → **[Bluetooth]**.
4. Select the device you want to connect from the search results.
5. Depending on the type of Bluetooth device that you want to connect to, you will need to enter the pertinent information.

# SAFETY INSTRUCTIONS

**SCORPION**   
RUGGED TABLET & HANDHELD SOLUTIONS

Please read carefully before using!



## Environment:

Protect the device from temperatures outside the specified range. The device is protected against spray water but must not be submerged in water or be exposed to water jets. Do not expose the unit to strong magnetic fields or strong static electricity. Once water or liquid has entered the unit, turn it off and do not use until it is dried. Have it checked by a qualified specialist.



## Safety in operation:

Do not drop the device. Do not bend or twist it. This may result in a breakage of the display glass or of circuit boards and mechanical parts. To avoid hearing damage, listen to music via headphones at a moderate volume and never place the speaker outputs directly in front of your ear. Keep packaging materials and small parts away from children. There is a danger of suffocation. Never open the case of the appliance or the charger (risk of electric shock, short-circuit and fire). Do not put objects through slots or openings on the appliance or charger (risk of electric shock, short circuit, and fire). Do not attempt to open the unit, the unit may be destroyed and you will lose warranty.



## Cleaning:

Never clean the surface of the appliance with solvents, detergents or other chemical products. Use a soft, dry cloth instead.



## Power supply:

Always use the original charger or one with suitable current and voltage rating to prevent damage to the device. If you use an universal charger, consider the polarity of the charger as well as the current and the voltage rating. Do not unplug the charger from the wall outlet by pulling the cable. Do not use chargers with damaged cables or plugs.



## Disposal:

Dispose used electronic equipment at the appropriate collection points. Please note that your device has a battery and therefore it must not be disposed with normal household waste. Please consult your local or municipal authorities for the correct disposal route of your device and battery.



## Battery:

Batteries are wearing parts whose life cycle depends on handling.

Please also note the following:

- Fully charge the battery every six months
- Avoid exposing the device or the battery to excessive heat
- Do not expose the battery to mechanical stress
- Do not damage batteries with sharp or pointed objects
- Do not throw batteries into fire - they may explode
- Do not pour any liquids over the battery
- Avoid short-circuit, as it may result in overheating and ignition of the battery
- If liquid leaks from the battery and comes into contact with the eyes or skin, rinse immediately with clear water and seek medical advice
- Incorrect replacement of the battery may result in a risk of explosion
- Replace battery only by the same or an equivalent type recommended by the manufacturer
- Please do not dispose used batteries with household waste. Use the service of specialist shops that carry out the exchange.