


SCORPION 10" SLIM ANDROID

Rugged Android Tablet Device

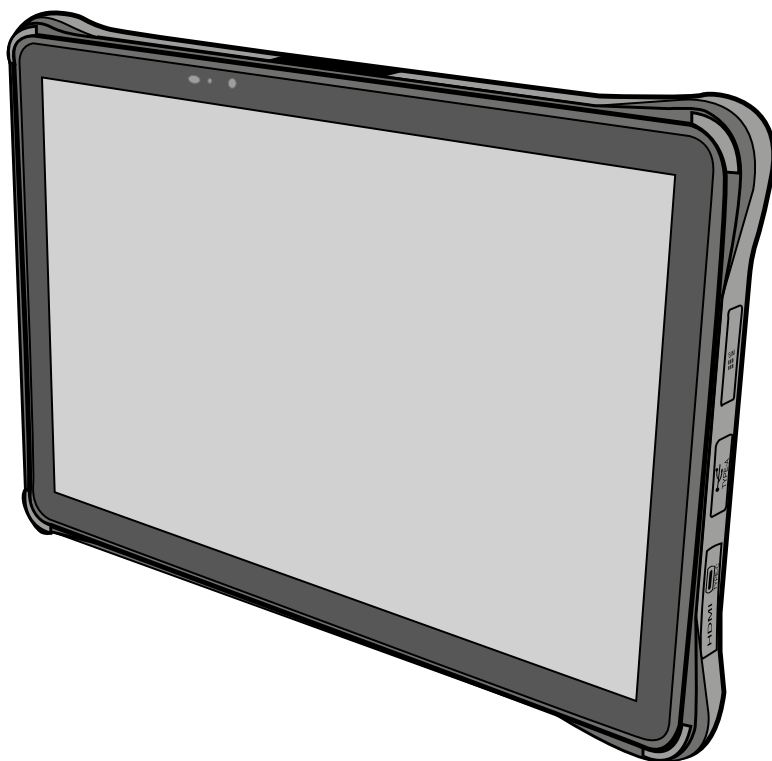


OVERVIEW

Package Content


- 1 x SCORPION 10" SLIM Android
- 1 x Lithium Battery (10000mAh)
- 1 x Charger (5V/2A Or 9V/2A or 12V/1.5A)
- 1 x Type C USB Cable(1M)
- 1 x Quick Start Guide

Front View/ Side View

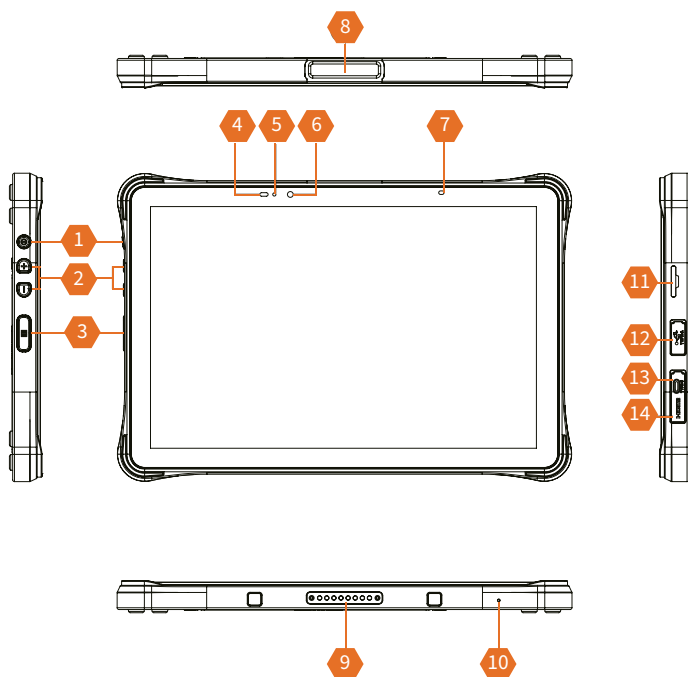

- | | |
|------------------|----------------------|
| 1. Power Button | 8. Barcode Scanner |
| 2. Volume Button | 9. POGOPIN |
| 3. Scan Key | 10. MIC |
| 4. Light sensor | 11. F/ Nano SIM Slot |
| 5. Power LED | 12. USB Type-A |
| 6. Front Camera | 13. USB Type-C |
| 7. Scan LED | 14. Micro HDMI |

Rear View

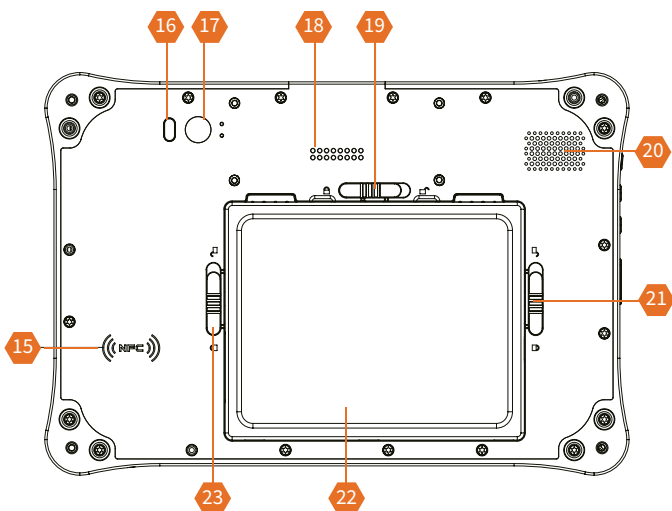

- 15. NFC
- 16. LED Flash
- 17. Rear Camera
- 18. POGOPIN
- 19. Battery Cover Lock
- 20. Speaker
- 21. Battery Cover Lock
- 22. Battery
- 23. Battery Cover Lock


INSTALLATION

The SCORPION 10" SLIM Android comes with a Lithium battery in the packing box.




1. Make sure to use the battery provided with the SCORPION 10" SLIM Android. Using a wrong battery may result in a risk of explosion.
2. Before installing the battery make sure all the components are dry. Using wet components may cause damage not covered by the warranty.


1. Turn off the SCORPION 10" SLIM Android. Move the battery cover lock buttons to the unlock position.

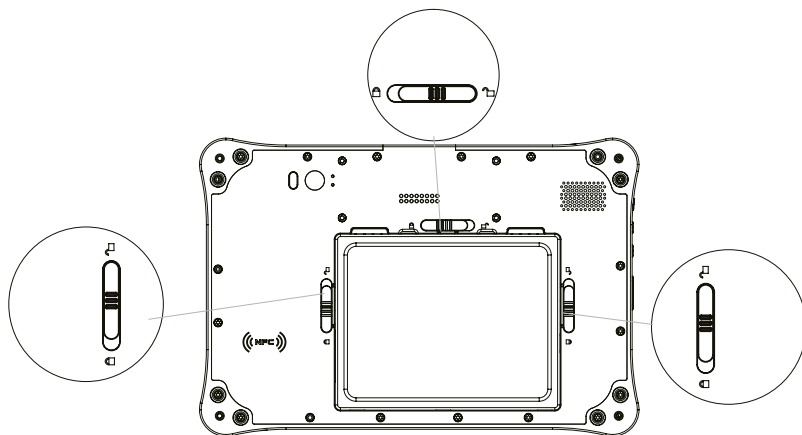

2. Gently pry off the battery cover from the grooves on the sides.

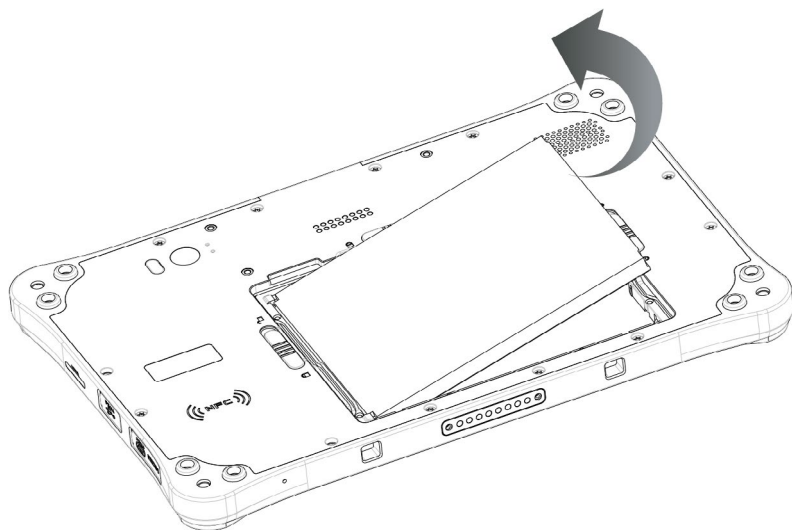

3. Insert the battery. Please insert the connector side first, and then press the battery down.

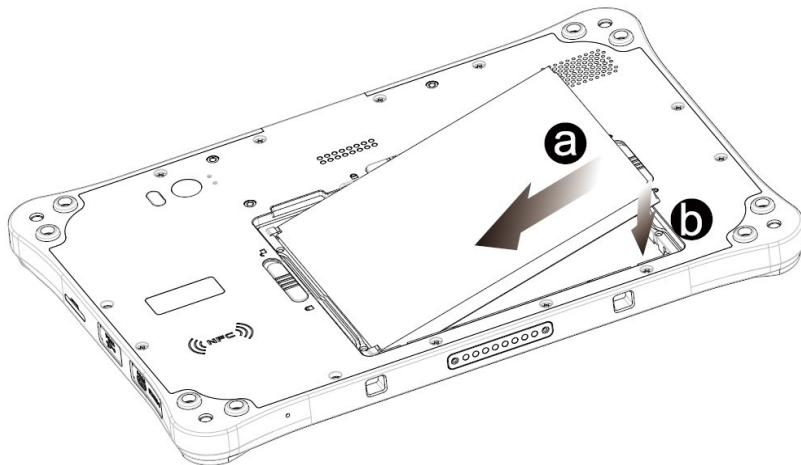


4. Replace the battery cover. Move the battery cover lock button to the lock position.
5. Locate the microSD and Nano SIM card holder on the side and insert the card.
6. Push the card holder into the slot until it locks into place.



CHARGING


Charging Via a Computer

1. Open the TYPE-C cover on the right side of the SCORPION 10" SLIM Android to reveal the TYPE-C port.
2. Using the provided TYPE-C USB cable, connect the SCORPION 10" SLIM Android to your computer.

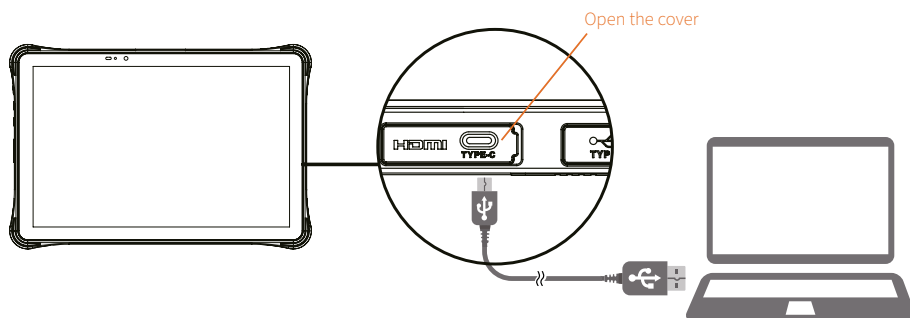

Charging Via AC Power

1. Open the TYPE-C cover on the right side of the SCORPION 10" SLIM Android to reveal the TYPE-C port.
2. Using the provided TYPE-C USB cable, connect the SCORPION 10" SLIM Android to the provided power charger.
3. Connect the power charger to charge the SCORPION 10" SLIM Android.

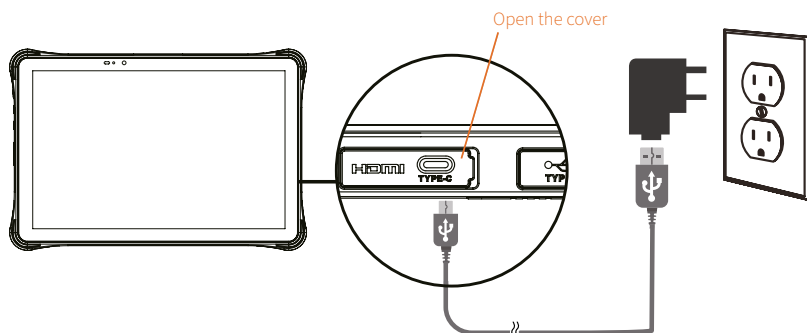

Using the battery and charger not provided with the SCORPION 10" SLIM Android may result in damage not covered by the warranty.

Turning On/Off

1. To turn on the SCORPION 10" SLIM Android, long press the Power key for 3 seconds.
2. To turn off the SCORPION 10" SLIM Android, press the Power key for 1 second and then a power menu will pop up.

Sleeping/Awakening Mode

1. When the screen is on, press the Power key to put the SCORPION 10" SLIM Android into sleep mode.
2. When the screen is off, press the Power key to wake up the SCORPION 10" SLIM Android.

Resetting

If the system stops responding, long press the Power key for about 15 seconds and release to reset the SCORPION 10" SLIM Android.

Power LED

Status	LED	Description
Non- charging	Flashing Red	Battery power is below 15%
	No LED	Battery power is above 15%
	Flashing Green	Incoming call, message or notification
Charging	Solid Red	Battery Power is 0 - 89%
	Solid Green	Battery Power is 90 - 100%

Notice

1. Do not use or charge the device in dusty or damp places. Otherwise, the circuit may not function properly.
2. Do not place the device near heater or other sources of heat.
3. Keep the ambient temperature between -10 °C ~ 50 °C and relative humidity between 10% ~ 90% RH for using the device.
4. Use only the charger and charging cable provided with the device.

SAFETY INSTRUCTIONS

Please read carefully before using!



Environment:

Protect the device from temperatures outside the specified range. The device is protected against spray water but must not be submerged in water or be exposed to water jets. Do not expose the unit to strong magnetic fields or strong static electricity. Once water or liquid has entered the unit, turn it off and do not use until it is dried. Have it checked by a qualified specialist.



Safety in operation:

Do not drop the device. Do not bend or twist it. This may result in a breakage of the display glass or of circuit boards and mechanical parts. To avoid hearing damage, listen to music via headphones at a moderate volume and never place the speaker outputs directly in front of your ear. Keep packaging materials and small parts away from children. There is a danger of suffocation. Never open the case of the appliance or the charger (risk of electric shock, short-circuit and fire). Do not put objects through slots or openings on the appliance or charger (risk of electric shock, short circuit, and fire). Do not attempt to open the unit, the unit may be destroyed and you will lose warranty.



Cleaning:

Never clean the surface of the appliance with solvents, detergents or other chemical products. Use a soft, dry cloth instead.



Power supply:

Always use the original charger or one with suitable current and voltage rating to prevent damage to the device. If you use an universal charger, consider the polarity of the charger as well as the current and the voltage rating. Do not unplug the charger from the wall outlet by pulling the cable. Do not use chargers with damaged cables or plugs.



Disposal:

Dispose used electronic equipment at the appropriate collection points. Please note that your device has a battery and therefore it must not be disposed with normal household waste. Please consult your local or municipal authorities for the correct disposal route of your device and battery.



Battery:

Batteries are wearing parts whose life cycle depends on handling.

Please also note the following:

- Fully charge the battery every six months
- Avoid exposing the device or the battery to excessive heat
- Do not expose the battery to mechanical stress
- Do not damage batteries with sharp or pointed objects
- Do not throw batteries into fire - they may explode
- Do not pour any liquids over the battery
- Avoid short-circuit, as it may result in overheating and ignition of the battery
- If liquid leaks from the battery and comes into contact with the eyes or skin, rinse immediately with clear water and seek medical advice
- Incorrect replacement of the battery may result in a risk of explosion
- Replace battery only by the same or an equivalent type recommended by the manufacturer
- Please do not dispose used batteries with household waste. Use the service of specialist shops that carry out the exchange.